




E-Z EVENT SYSTEM™ 20' CANOPY AWNING KIT INSTRUCTION SHEET

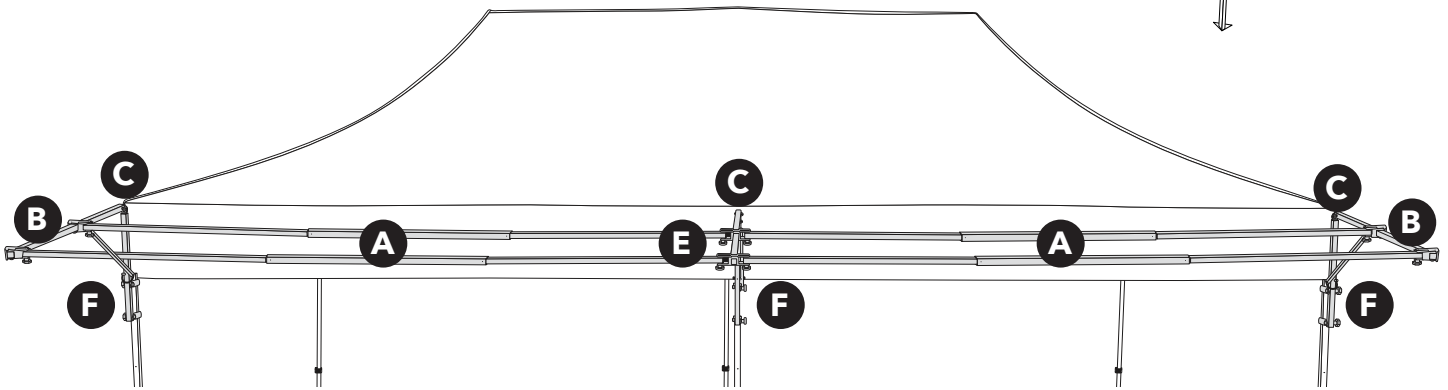

KIT INCLUDES:

- A. (4) Crossbars
- B. (8) Square Crossbar Brackets with Thick Inserts
- C. (4) Awning Frame Sides
- D. (2) Rubber Strap (Not Shown)
- E. (2) E-Z Brackets, 180-Degree (Ships Separately)
- F. (6) E-Z Brackets, Single (Ships Separately)
- G. (1) Awning Cover (Not Shown, Ships Separately)

SET UP




1

ASSEMBLE CROSSBARS

- Assemble all four crossbars by inserting the two end bars into the center bar, pushing until the snap buttons engage.
- Attach a single bracket with the thick insert to the left end of each crossbar, but only tighten slightly.
- For two crossbars, attach a 180-degree bracket with a thick insert to the right end. These two are installed first in step 4.



Thick Insert

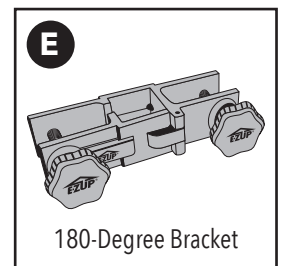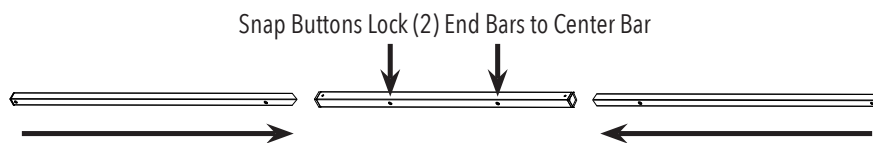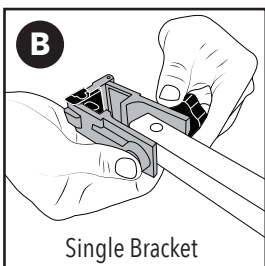

2 INSTALLING THE FRAME SIDES AND CENTER


- All legs of the canopy should be at its lowest height to start.
- Identify the left (L) and right (R) side frames from the stickers. The left side frame is installed first (left when facing the canopy from outside).
- With two people, wrap the bracket around the leg, insert the thumb screw through the left (L) attachment bar, push the bracket up until the top of the bar is flush to the top of the canopy leg, tighten thumb screw until snug. Repeat the process to install second bracket to fully secure the attachment bar.
- Repeat with two brackets to attach the right (R) awning side on the right side of the canopy frame.
- At the center leg, use two brackets to attach the remaining right (R) awning side (one left side will be a spare).
- The Vantage leg (1-1/8") requires a thin insert. Push the center plug into the bracket hole.




Thin Insert




Thick Insert

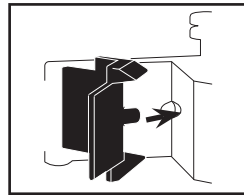

Center Plug



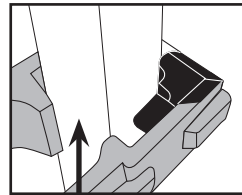


Wrong Insert (Bracket Can't Close)

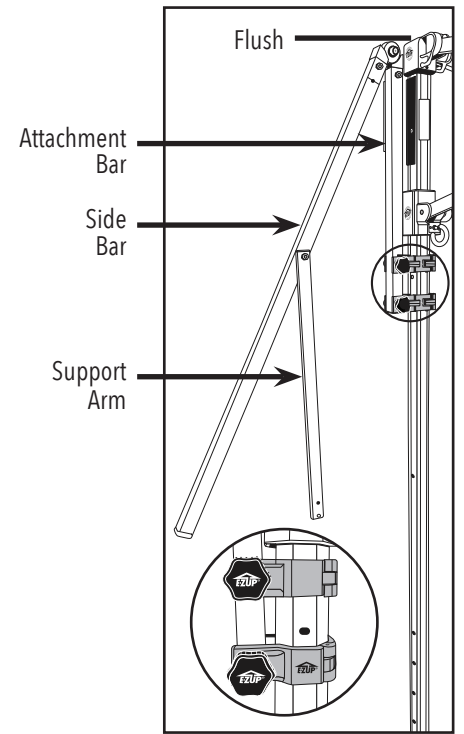



3 RAISE THE FRAME SIDES AND CENTER

- With two people, raise the side bar nearly horizontal and push the support arm towards the attachment bar to line up the holes for the locking pin. Install the locking pin and latch closed.
- Repeat for the other side and the center.

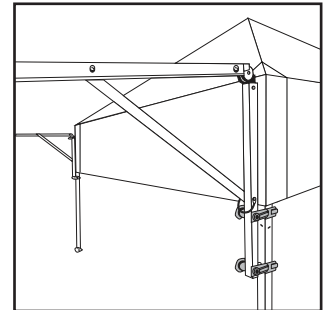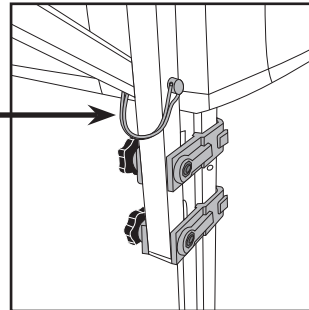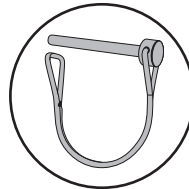


4 INSTALLING THE CROSSBARS

- With two people, select a crossbar that has one single bracket and one 180-degree bracket installed. Position the single bracket onto the left side bar and the 180-degree bracket onto the center bar. Fully loosen the thumb screws, then slide the brackets onto the side bar. Push the brackets toward the support arm and tighten the screws until snug.
- Repeat the previous step to attach the second crossbar, ensuring the brackets sit flush with the ends of the left side bar and center bar.
- Install the two remaining crossbars by attaching the single bracket to the right side bar and connecting the opposite end to the center 180-degree bracket.

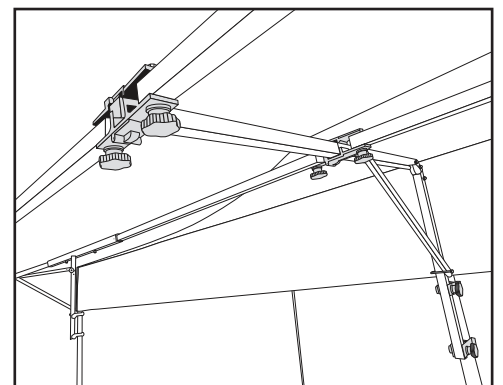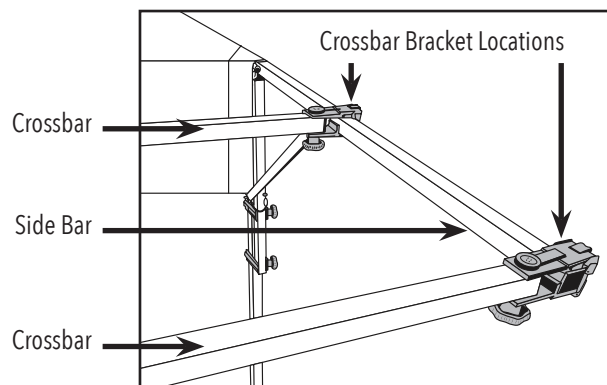

NOTE: If installing alone, follow these steps:


- Hang a rubber strap at the end of the left and right side bars on the awning frame.
- Select a crossbar with one single bracket (left side) and one 180-degree bracket (right side), place the right end of the crossbar on the ground and hang the left end from the rubber strap on the side bar. Ensure the strap grips the metal of the crossbar (not the bracket) to avoid slipping.
- Lift the crossbar end from the ground, fully loosen the thumb screw, then slide the 180-degree bracket onto the center bar. Push the bracket back toward the support arm and tighten until snug.
- Remove the rubber strap, fully loosen the thumb screw on the single bracket, then slide the bracket onto the side bar. Push the bracket back toward the support arm and tighten until snug.
- Repeat this process to attach the second crossbar so it is flush with the end of the side bar.
- Repeat these steps for the right side crossbars.

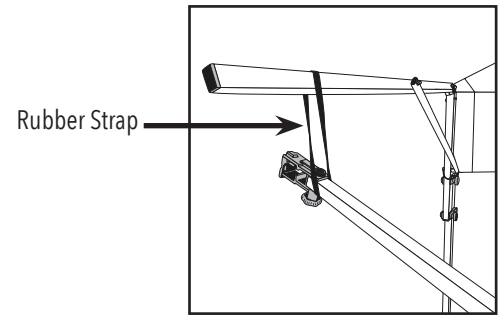


5 INSTALLING THE AWNING COVER (WITHOUT THE E-Z EVENT FOOD BOOTH SIDEWALL)

- Unfold the cover and place it over the awning frame, pull the cover down over the frame.
- Attach the hook and loop straps on the inside of the cover to the awning frame.
- Attach the hooks to the inside of the canopy frame and adjust the strap length as needed so rainwater flows to the outer edges of the awning.
- With the awning fully set up, raise the four canopy legs to the desired height.

View From Under Awning

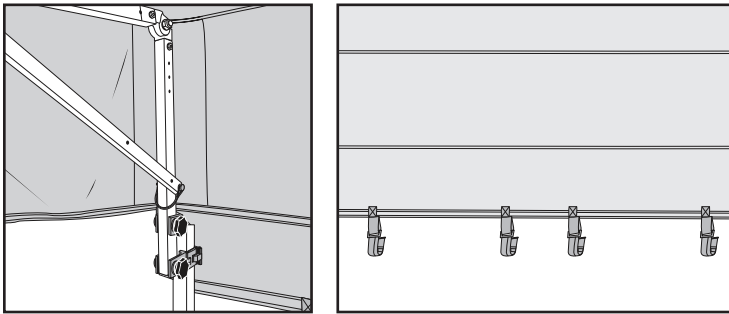


View From Under Canopy

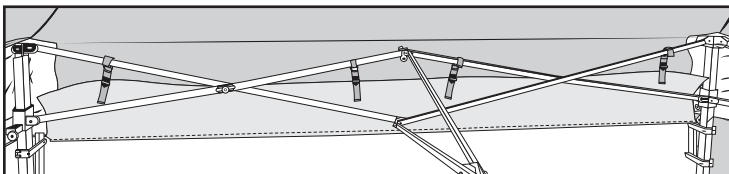

INSTALLING THE AWNING COVER (WITH THE E-Z EVENT FOOD BOOTH SIDEWALL)

- With two people, one inside the canopy and one under the awning, attach the center hooks **(A)** to the upper truss on the canopy frame.
 - The person under the awning should push the straps with hooks behind the valance and then bring them up in front of the food booth wall.
 - The person inside will attach the two center hooks **(A)** to the upper truss.
- With two people, repeat the process for the two outer hooks **(B)**.
- Adjust the strap lengths as needed so rainwater flows to the outer edges of the awning.

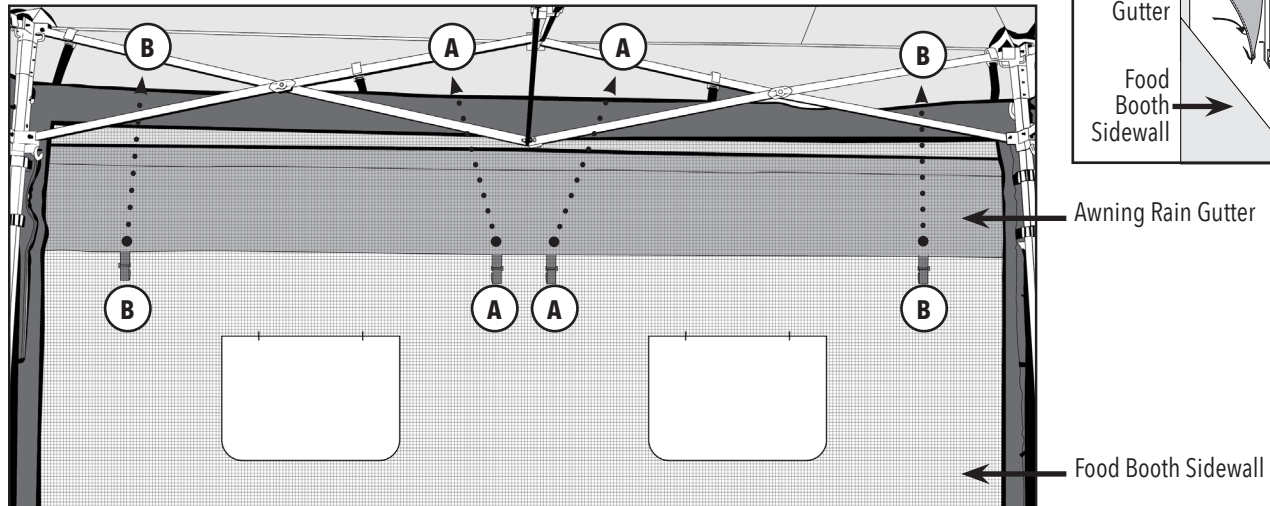

CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Instant Shelter® products, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for the top cleaning.
- Let the E-Z UP® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally treated with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer (available at most sporting goods and hardware stores) if top leaks or drips water.
- Slightly tighten bolts if frame becomes loose.

REPLACEMENT PARTS

800-45-SHADE ezup.com/parts.html

WARRANTY INFORMATION

ezup.com/support/warranties

CONDITIONS

This warranty shall be void as to any product that has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberate damage of the product, nor to the use of the product that does not conform with the product instructions. This warranty is provided in lieu of all other warranties, expressed or implied.

WARNING: Keep all flame and heat sources away from all Instant Shelter® fabrics and accessories. These fabrics meet the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

IMPORTANT INFORMATION

Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Always stake or weigh down your E-Z UP® Instant Shelter® product with genuine E-Z UP® accessories. See ezup.com for products and guidelines. Do not use in any potentially windy or rainy weather.
- Wind and rain can damage the E-Z UP® Instant Shelter® product and also may result in injury to you or others. Therefore, do not rely on your shelter for protection in heavy or prolonged rain storms.
- The E-Z UP® Instant Shelter® product is designed as a temporary shelter. Do not leave up for extended periods.
- Use caution when handling the E-Z UP® folding frame.
- Avoid pinching hands or fingers as frame opens or closes.
- Do not use shelter in a lightning storm.
- Do not leave your E-Z UP® Instant Shelter® product unattended.
- Do not build fires within shelter enclosure.

© Copyright 2026 International E-Z UP, Inc. USA. All rights reserved.

INTERNATIONAL E-Z UP, INC.
1900 Second St., Norco, California 92860

800-45-SHADE

The #1 Instant Shelter® Brand in the World

ezup.com