



WHAT'S IN THE BOX

(1) Frame, (1) Fabric Top, (1) Wide-Trax™ Roller Bag, (1) 6-Piece Stake Kit

ONE-TIME TOP INSTALLATION

Unpack and Open

1. Place your E-Z UP[®] Frame in the center of the area to be sheltered.
2. With partner on the opposite side of the Frame, grasp two outer legs, lift the Frame slightly off the ground, and step backwards while pulling the Frame to open. (Fig A)
3. Stop when the Frame is approximately 1/2 of its fully-opened size.
4. Set the Frame back on the ground.


Attach Fabric Top

5. Gently unfold the Fabric Top, and place it over the semi-opened Frame. (Fig B)
6. Attach the Fabric Top to the E-Z UP[®] Frame by matching the Hook and Loop strips on the inside of the Fabric Top corners with the Hook and Loop strips on each Frame corner. (Fig C)
7. Pull the Fabric Top down over the Frame corners—pushing the Hook and Loop strips firmly together.

Secure Top to Frame

8. Line up the grommet holes on the sides of the Fabric Top to the Frame top attachment points. The top attachment points on the Frame are denoted by the RED tags. (Fig D)
9. Using a coin, unscrew the Top Attachment Nut from the frame bolt. (Fig E)
10. Place Fabric Top grommet on the Frame bolt.
11. Screw on top attachment nut and tighten until snug. Top Fabric should rotate easily. Do not over-tighten.
12. Repeat this procedure at each of the top attachment points.

Note: Hold the bolt assembly with one hand while tightening the top attachment nut with your other hand.

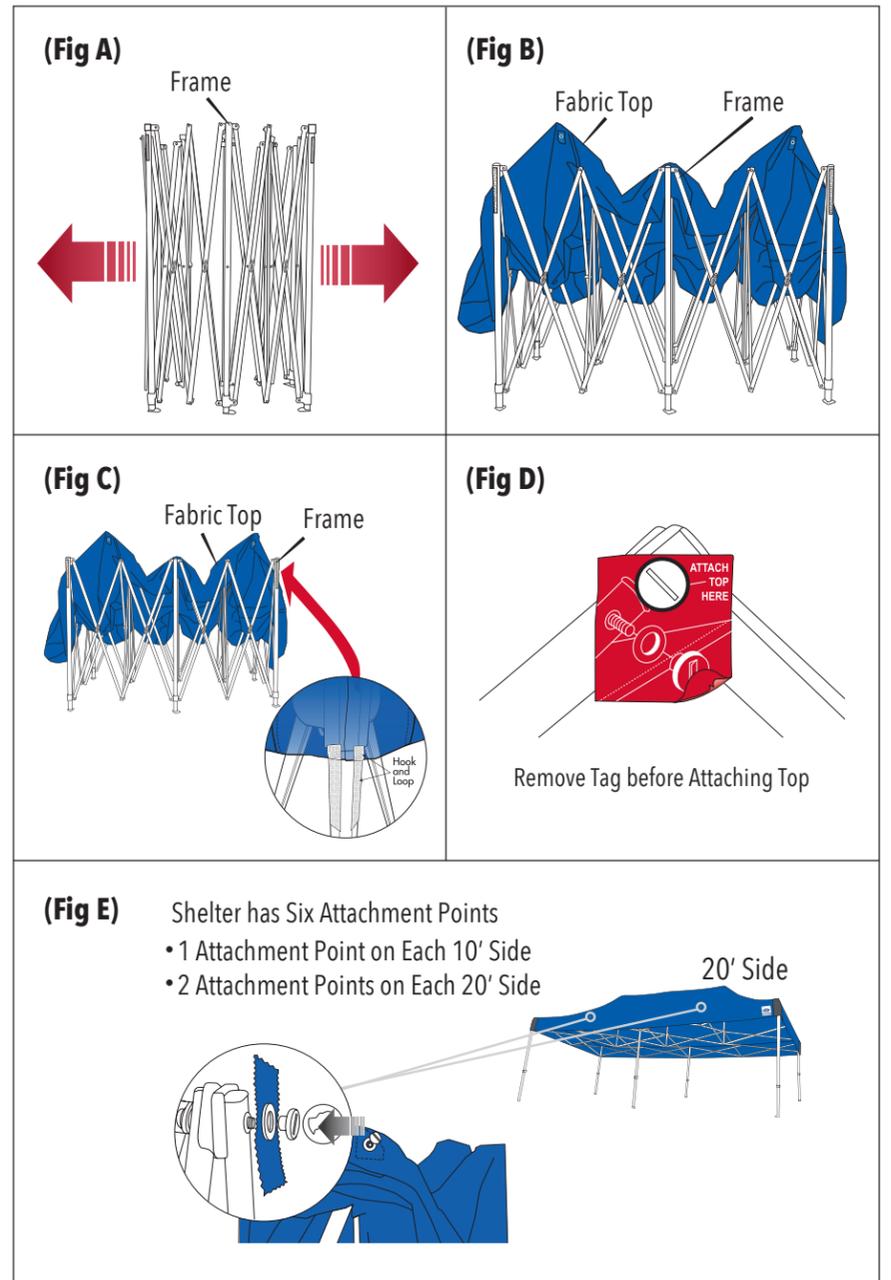

SET UP

Open E-Z UP[®] Shelter

1. With a partner on the opposite 10' side, grasp the bottom of the diamond-shaped area of outer trusses near the "OPEN HERE" sticker. (Fig A)
2. Lift the Frame up slightly and step backward until the shelter is almost fully opened. Gently shake the shelter while opening. Be careful not to pinch fingers!

Secure Auto-Slider[®] Pull Pin

3. Fold up the Fabric Top corner to expose the Auto-Slider[®] Pull Pin. (Fig B)
4. Lift shelter corner slightly off the ground and engage the Auto-Slider[®] Pull Pin by pushing up on the Frame side trusses with one hand while holding down the top of the Frame leg with the other hand. The pins will auto-engage when aligned with the holes on the frame legs.
5. After the Auto-Slider[®] Pull Pin has locked into place, pull the Fabric Top down over the frame leg, making sure to align and secure the hook and loop strips on the Fabric Top to the Frame.


Repeat on all remaining corners.

Extend & Secure Frame Legs (Fig C)

6. With a partner, lift the two adjacent outer legs up off the ground simultaneously to about waist height.
7. Slide the lower/inner legs out until the leg adjustment toggle buttons lock at selected height on each leg.
Note: There are 5 adjustment settings on each leg.
8. Lower middle leg until the toggle button locks.
9. Repeat on the remaining legs.

Note: It is recommended that you use genuine E-Z UP[®] Deluxe Weight Bags and/or Heavy-Duty Stake Kits to secure your shelter.

Your E-Z UP[®] shelter setup is now complete!

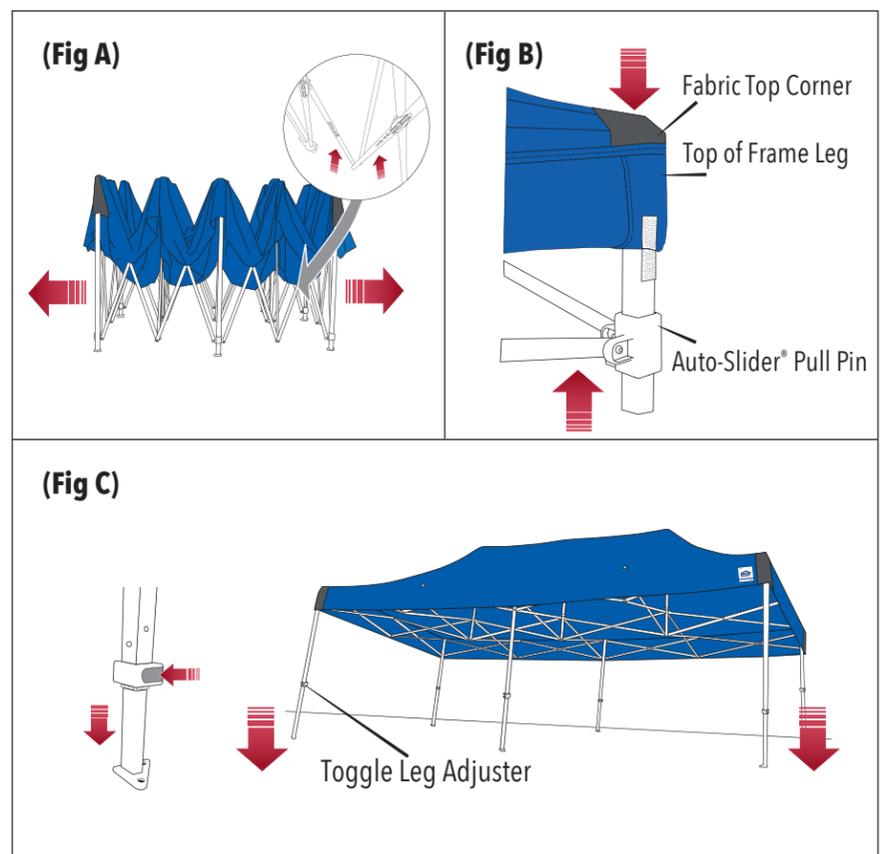



TAKE DOWN

Collapse Shelter Legs

1. Depress the toggle button on one of the middle legs to slide the lower/inner leg section into the upper/outer leg, then proceed with the instructions below.
2. With a partner, slightly lift two adjacent corner legs simultaneously. (Fig A)
3. Depress the toggle button and slide lower/inner legs into upper/outer legs, making sure to do two legs at a time on the same side.
4. Repeat on remaining legs.
Note: Keep the toggle button depressed while retracting leg.

Release Auto-Slider® Pull Pin

5. With one hand, slightly push up on the truss near the Auto-Slider® Pull Pin to relieve pressure. (Fig B)
6. With the other hand, release the Auto-Slider® Pull Pin by pulling the ring.
7. Repeat on remaining legs.

Closing Shelter

8. Grasp the Frame on the top of the diamond-shaped area of center outer trusses on the opposite sides near the "CLOSE HERE" sticker. (Fig C)
9. Lift the shelter up slightly, and shake it while stepping toward your partner until the shelter is approximately 3/4 closed. Be careful not to pinch fingers!
10. Grasp the two outer legs, and push the frame together until it is fully closed.
11. When storing your shelter in the roller bag make sure the 20' side of the shelter (the side with three legs) is positioned on the side of the bag with the wheels. (Fig D)

ROLLER BAG (One Time Assembly)

Use the Roller Bag to store and transport your shelter and Stake Kit. (Fig. E)

1. Slide Axle through Roller Bag Receiver.
2. Slide the two Wheel Spacers onto each side of Axle (one on each side).
3. Slide one Wheel onto each side of the Axle.
4. Push Snap Clip over Wheel Axle end (against Wheel).

Your Roller Bag is ready to use!

CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Instant Shelter® products, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for the top cleaning.
- Let the E-Z UP® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally treated with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer (available at most sporting goods and hardware stores) if top leaks or drips water.
- Slightly tighten bolts if frame becomes loose.

REPLACEMENT PARTS


800-45-SHADE ezup.com/parts.html

WARRANTY INFORMATION

ezup.com/support/warranties

CONDITIONS

This warranty shall be void as to any product that has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberate damage of the product, nor to the use of the product that does not conform with the product instructions. This warranty is provided in lieu of all other warranties, expressed or implied.

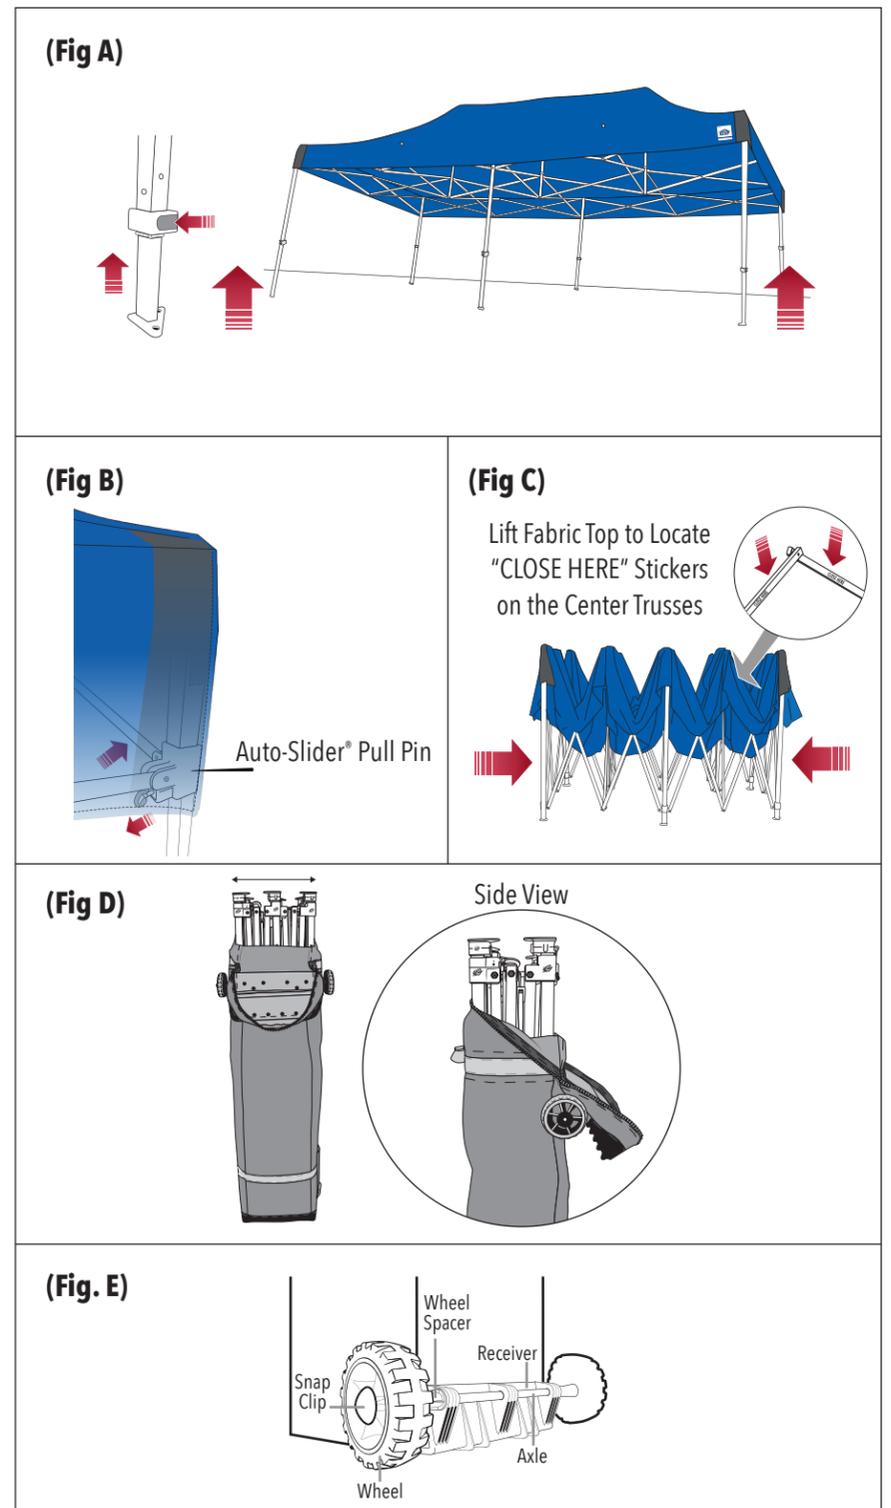

IMPORTANT INFORMATION

Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Always stake or weigh down your E-Z UP® Instant Shelter® product with genuine E-Z UP® accessories. See ezup.com for products and guidelines. Do not use in any potentially windy or rainy weather.
- Wind and rain can damage the E-Z UP® Instant Shelter® product and also may result in injury to you or others. Therefore, do not rely on your shelter for protection in heavy or prolonged rain storms.
- The E-Z UP® Instant Shelter® product is designed as a temporary shelter. Do not leave up for extended periods.
- Use caution when handling the E-Z UP® folding frame.
- Avoid pinching hands or fingers as frame opens or closes.
- Do not use shelter in a lightning storm.
- Do not leave your E-Z UP® Instant Shelter® product unattended.
- Do not build fires within shelter enclosure.

WARNING:

Keep all flame and heat sources away from all Instant Shelter® fabrics and accessories. These fabrics meet the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.