



INSTRUCTIONS FOR



WHAT'S IN THE BOX

(1) Frame, (1) Fabric Top, (1) Peak Cap, (1) Wide-Trax™ Roller Bag, (1) 4-Piece Stake Kit

ONE-TIME INSTALLATION

Unpack & Open

1. Place your E-Z UP® canopy in the center of the area to be sheltered.
2. With two people, lift frame until all four legs are slightly raised off the ground. Walk backwards to partially open the canopy frame about 3'.

Attach Peak Cap and Fabric Top

1. Place the peak cap over the top part of the frame. Slip the corner pockets onto the vent poles, firmly pulling the last corner pocket onto the final vent pole. (Fig. A & Fig. C)
2. With two people, lift frame until all four legs are slightly raised off the ground. Walk backwards to partially pull the canopy frame open about 6'.
3. Flip the eave poles into place making sure Eave Lock/Release Buttons "click" and lock into place. (Fig. A & B)
4. Drape the fabric top over the frame, center the cutout below the vent, then pull the fabric corner pockets onto the eave poles. (Fig. C)
5. With two people, lift frame until all four legs are slightly raised off the ground. Walk backwards to pull the canopy frame fully open.
6. While holding the leg down with one hand, push the slider toggle up until it snaps into place. This will ensure frame is fully extended. (Fig. D)
7. Raise two adjacent legs to the lowest setting to get under the canopy. Secure the fabric top by attaching the hook and loop straps to the frame. (Fig. E & Fig. F)

SET UP

Open Canopy & Extend Eaves

1. With two people, lift frame until all four legs are slightly raised off the ground. Walk backwards to partially open the canopy frame about ¾ of the way.
2. Flip the eave poles into place making sure Eave Lock/Release Buttons "click" and lock into place. (Fig. A & B)
3. Pull the top fabric corner pockets onto the eave poles, then pull the sides of the fabric top so it hangs slightly over the outer trusses on all four sides.


Extend & Secure Frame Legs

1. With two people, lift frame until all four legs are slightly raised off the ground. Walk backwards to pull the canopy frame fully open.
2. While holding the leg down with one hand, push the slider toggle up until it snaps into place. This will ensure frame is fully extended. (Fig. D)
3. Lift one leg and pull out the inner leg until the leg toggle locks into place, then adjust to the desired height. Repeat for all four legs and make sure all four legs are the same height. (Fig. F)

4. Insert the supplied stakes into the foot of each canopy leg. (Fig G)

Note: To secure your canopy on sand or on a hard surface (concrete, deck, etc.), go to ezup.com for weight bags, plates, and anchors.

Your E-Z UP® canopy setup is now complete!

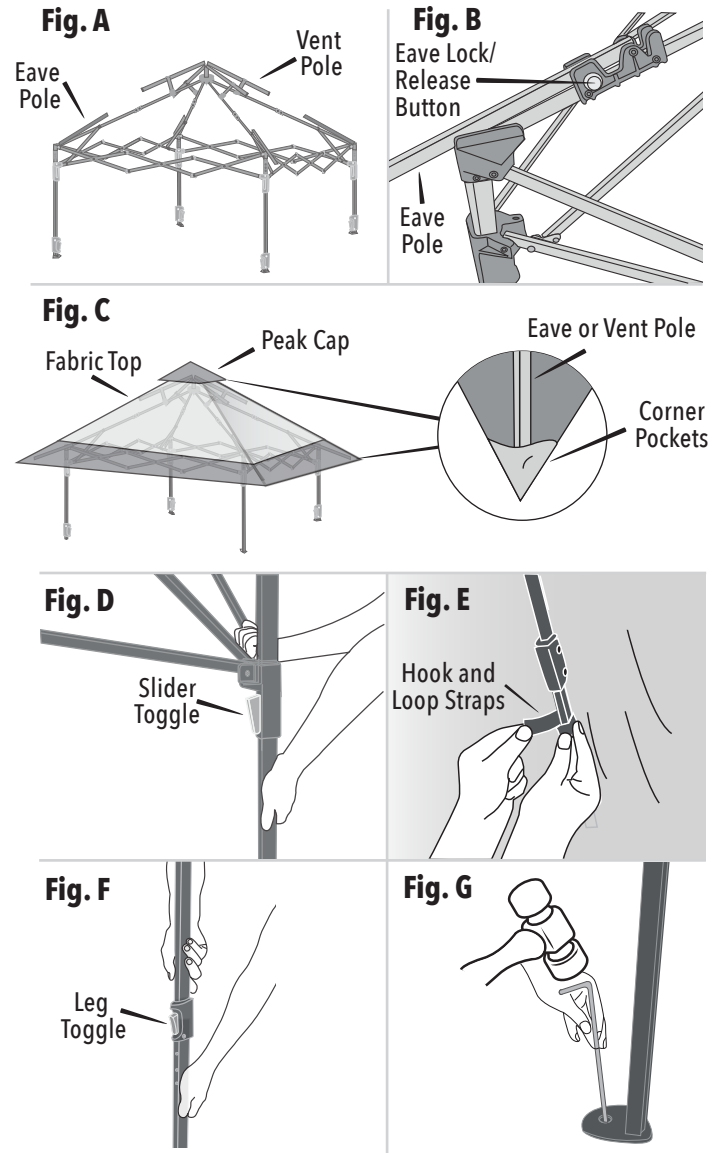



INSTRUCTIONS FOR



TAKEDOWN

Collapse Canopy Legs

1. Remove the stakes from the foot of each canopy leg. (Fig. A)
2. Press the leg toggle on each leg to lower the canopy to its lowest height. (Fig. B)
3. Press the Eave Lock/Release Button and flip the eave poles to the inside of the canopy frame. (Fig. C)
4. Press and release the slider toggle then gently lower the top section of the frame. (Fig. D)

Closing Canopy

5. With two people, lift frame until all four legs are slightly raised off the ground. Walk together and shake the frame to close the canopy.
6. Place the roller bag wheels up over the canopy. Slide the bag over the canopy and pull all the way down. Lay the canopy down on the ground and close the zipper.
7. Flip the bag onto its wheels. Store the stakes in the outer pocket on the roller bag.

Fig. A

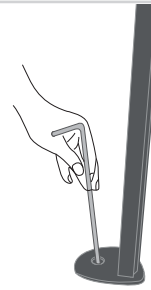


Fig. B

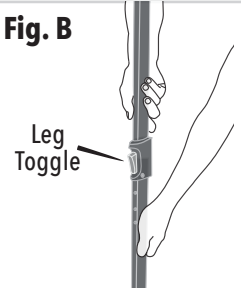


Fig. C

Eave Lock/
Release Button

Eave Pole


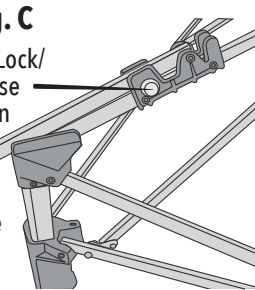


Fig. D

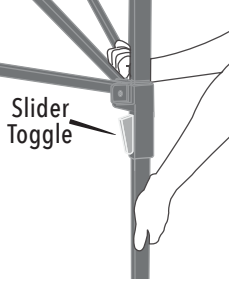


ROLLER BAG (One Time Assembly) Use the roller bag to store and transport your canopy and stake kit. (Fig. E)

1. Slide axle through roller bag receiver.
2. Slide the two wheel spacers onto each side of axle (one on each side).
3. Slide one wheel onto each side of the axle.
4. Push snap clip over the end of each axle (against wheel).

Your roller bag is ready to use!

Fig. E

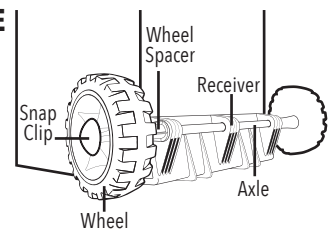

CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Instant Shelter® products, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for the top cleaning.
- Let the E-Z UP® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally treated with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer (available at most sporting goods and hardware stores) if top leaks or drips water.
- Slightly tighten bolts if frame becomes loose.

REPLACEMENT PARTS

800-45-SHADE ezup.com/parts.html

WARRANTY INFORMATION

ezup.com/support/warranties

CONDITIONS

This warranty shall be void as to any product that has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberate damage of the product, nor to the use of the product that does not conform with the product instructions. This warranty is provided in lieu of all other warranties, expressed or implied.

IMPORTANT INFORMATION

Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Always stake or weigh down your E-Z UP® Instant Shelter® product with genuine E-Z UP® accessories. See ezup.com for products and guidelines. Do not use in any potentially windy or rainy weather.
- Wind and rain can damage the E-Z UP® Instant Shelter® product and also may result in injury to you or others. Therefore, do not rely on your canopy for protection in heavy or prolonged rain storms.
- The E-Z UP® Instant Shelter® product is designed as a temporary canopy. Do not leave up for extended periods.
- Use caution when handling the E-Z UP® folding frame.
- Avoid pinching hands or fingers as frame opens or closes.
- Do not use canopy in a lightning storm.
- Do not leave your E-Z UP® Instant Shelter® product unattended.
- Do not build fires within canopy enclosure.

WARNING: Keep all flame and heat sources away from all Instant Shelter® fabrics and accessories. These fabrics meet the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

© Copyright 2025 International E-Z UP, Inc. USA. All rights reserved.

INTERNATIONAL E-Z UP, INC.
1900 Second St., Norco, California 92860

800-45-SHADE

The #1 Instant Shelter® Brand in the World

ezup.com