



INSTRUCTIONS FOR



WHAT'S IN THE BOX

Includes: (1) Camping Cube™ Sport, (1) Carry Bag and (1) 4-Piece Spike Kit

SET UP

NOTE: To prolong the life of the Camping Cube™ Sport floor, select a leveled site clear of rocks, branches, and other hard or sharp objects.

1. Set up your E-Z UP® Shelter in the area that you intend to camp, leaving your Shelter legs retracted.
2. Slightly lift up the fabric valance corners on the corner of the shelter. Repeat on remaining corners.
3. Remove the Camping Cube™ Sport from the carry bag and center under your shelter.
4. Spread out the Camping Cube™ Sport, floor side down and position the doorway at your desired entrance.

NOTE: Step 5 will be different dependent on shelter*

5. Attach the Ceiling Truss Clips (see Product Key) to the shelter.

Open Truss Shelters

- 1) Locate the Center Ceiling Truss Clips (with long gray webbing). (Fig. A)
Attach Center Ceiling Truss Clips to peak of the shelter, adjacent to each other.
- 2) Attach the additional four Ceiling Truss Clips to the roof truss system.
(SKIP THIS STEP FOR DOME SHELTERS)

Cross Truss Shelters

- 1) Locate the center Center Ceiling Truss Clips (with short gray webbing). (Fig. A2)
Attach Center Ceiling Truss Clips to peak of the shelter, adjacent to each other.

*Illustrations of truss systems may vary slightly dependent on shelter.

6. Locate the Corner Truss Clips (which include Adjustable Straps). Attach the Corner Truss Clips to the outer truss on adjacent sides. (Fig. B) Adjust straps to desired length.
7. Attach the Side Truss Clips located on each of the four sides of the Camping Cube™ Sport to your Shelter's truss system. (Fig. C)
8. Pull the fabric top corner down over the frame leg. Repeat on remaining corners.
9. Raise your shelter to its full height.
10. Connect the S Hooks into the provided hole on the lower part of each leg. (Fig. D)
11. Wrap the Hook and Loop Straps around the legs of the shelter. (Fig. E)
12. Locate the Fabric Attachment Tabs located at the bottom of each wall of the Camping Cube™ Sport. Insert a spike through the Fabric Attachment Tab grommet. Drive the spike firmly into the ground. (Fig. F)

TAKE DOWN

1. Repeat steps in reverse of assembly.

CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Instant Shelter® products, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for the top cleaning.
- Let the E-Z UP® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally treated with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer (available at most sporting goods and hardware stores) if top leaks or drips water.
- Slightly tighten bolts if frame becomes loose.

REPLACEMENT PARTS

800-45-SHADE • ezip.com/parts

WARRANTY INFORMATION

www.ezip.com/warranties

CONDITIONS

This warranty shall be void as to any product that has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberate damage of the product, nor to the use of the product that does not conform with the product instructions. This warranty is provided in lieu of all other warranties, expressed or implied.

IMPORTANT INFORMATION


READ THIS INFORMATION BEFORE PROCEEDING. IT IS THE USER'S RESPONSIBILITY TO TAKE THE FOLLOWING PRECAUTIONS AT ALL TIMES.

- Interior O Ring Hanger(s) is not to exceed 5lb. hanging weight.
- Always stake or weigh down your E-Z UP® Instant Shelter® product with genuine E-Z UP® accessories. Do not use in any potentially windy or rainy weather.
- Wind and rain can damage the E-Z UP® Instant Shelter® product and also may result in injury to you or others. Therefore, do not rely on your shelter for protection in heavy or prolonged rain storms.
- The E-Z UP® Instant Shelter® product is designed as a temporary shelter. Do not leave up for extended periods.
- Use caution when handling the E-Z UP® folding frame.
- Avoid pinching hands or fingers as frame opens or closes.
- Do not use shelter in a lightning storm.
- Do not leave your E-Z UP® Instant Shelter® product unattended.
- Do not build fires within shelter enclosure.

WARNING: Keep all flame and heat sources away from all Instant Shelter® fabrics and accessories. These fabrics meet the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

PRODUCT KEY

- A** Corner Truss Clips (with Adjustable Straps)
- B** Side Truss Clips
- C** Center Ceiling Truss Clips
- D** Hook and Loop Straps
- E** S Hooks
- F** Fabric Attachment Tabs
- G** Ceiling Truss Clips (Open Truss Frames Only)

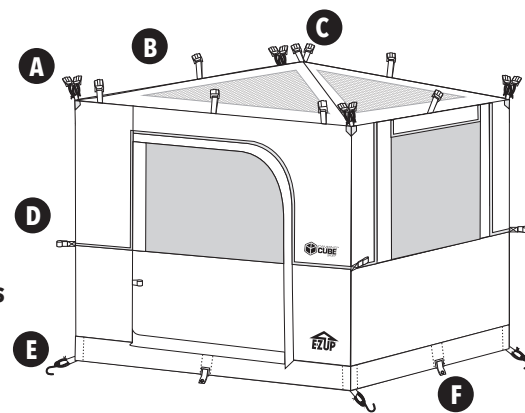

OPEN TRUSS FRAMES ONLY

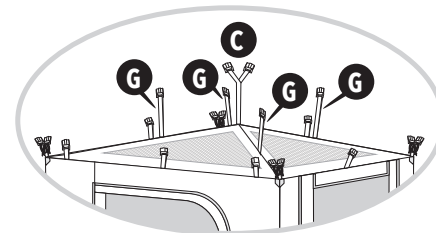


Fig. A Open Truss

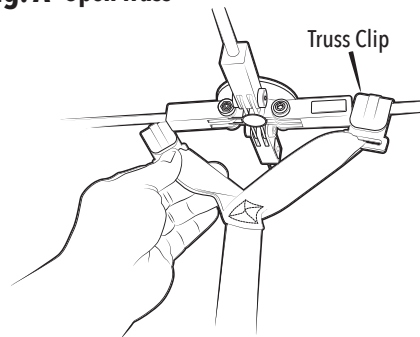


Fig. A2 Cross Truss

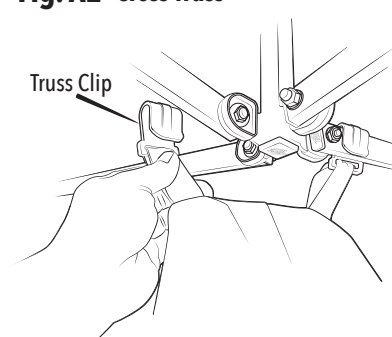


Fig. B

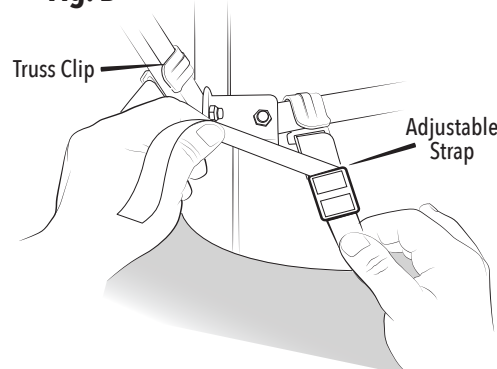


Fig. C

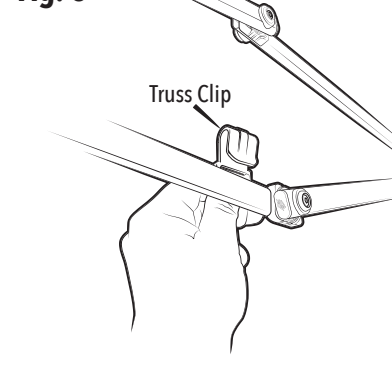


Fig. D

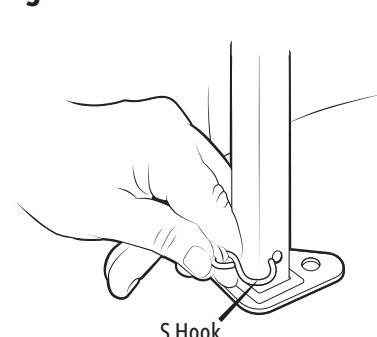


Fig. E

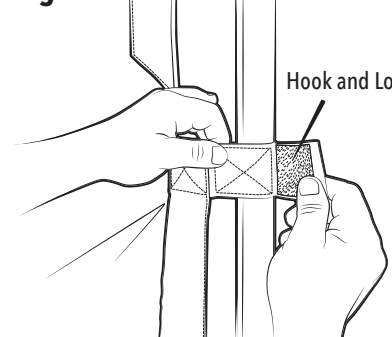


Fig. F

