




ezup.com




STEP 1

Insert the wire brace into channels at the arrows on one flap (two places).

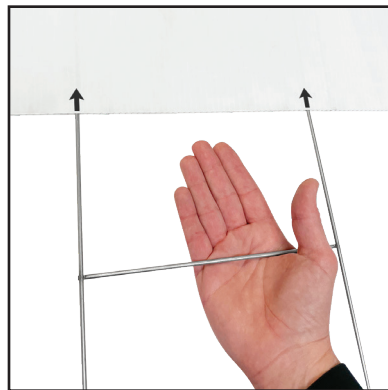

STEP 2

Fully push the wire brace in until the horizontal bar contacts the flap.

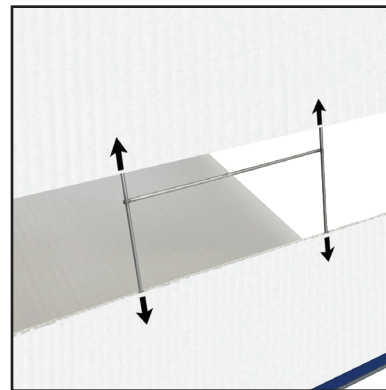

STEP 3

Insert the wire brace into channels at the arrows on second flap (two places).

Fully push the flaps together until the horizontal bar is contacting both flaps.



STEP 4

Stand sign upright. Optional to place a weight (not included) to secure the sign.